

POPCORN POPPER



DO NOT use another appliance on the same electrical circuit as the popcorn popper.
DO NOT TURN THE MACHINE ON WHILE EMPTY

CONTROLS

There are three switches on the popper:

LIGHT AND WARMER SWITCH

Turns on heat to bottom corn pan and light.

KETTLE MOTOR SWITCH

Turns on motor which drives kettle agitator shaft.

KETTLE HEAT SWITCH

Turns on heat element.




POPPING INSTRUCTIONS


1. Turn kettle heat and kettle motor switch "ON."
2. Load pre-measured popcorn and oil pouch into kettle.
3. When corn has finished popping, dump kettle.
4. Repeat cycle starting with #2; always pop pre-measured packages for best popcorn.
5. Turn off kettle heat switch halfway through the last popping cycle to eliminate smoking.


CARE AND CLEANING

Take any remaining popcorn out of the machine. Never immerse any portion of the kettle in water.

SAFETY PRECAUTIONS

	▲ WARNING To avoid serious burns, do NOT touch the kettle while it is hot.
---	--

	▲ WARNING Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the OFF position before plugging the equipment into a receptacle.
---	---

	▲ DANGER Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the kettle, warmer, or any other part of this equipment in water. Always unplug the equipment before cleaning or servicing.
---	---